



10.1.2 Replacing of sealings (cylinder cover)

Step 10

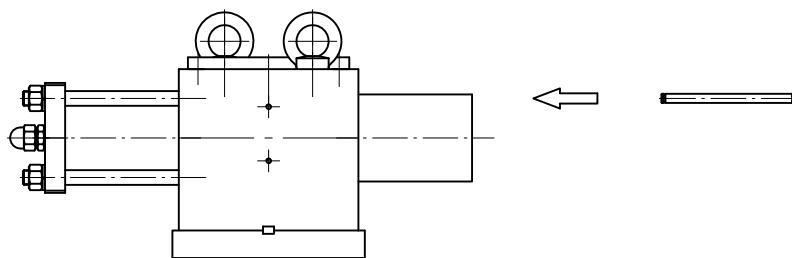


Mount the hydraulic pipe back on the actuator.

Step 11

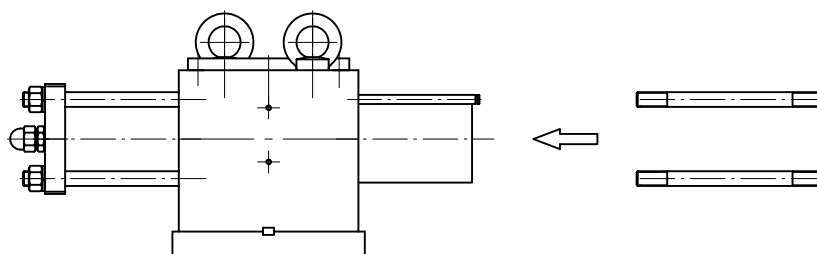


Mount the 4 tie rods. Note: don't damage the thread at the ends of the rods.

Step 12

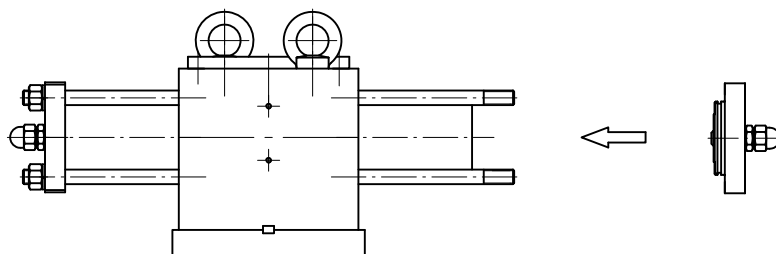

Mount the cover back on the actuator.

Step 13

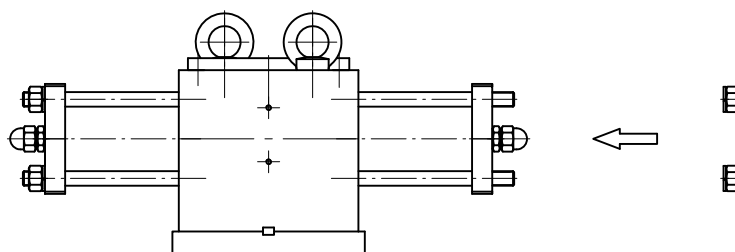

Screw the 4 nuts onto the rods and fasten them crosswise.